





90mm

USER INSTRUCTIONS


- 1) Drill 2 mounting holes on the wall. Recommended installation height: 1.4~1.7m from the ground. Recommended to the Drill Hole Template (Hole diameter: 6mm (0.236"). Hole distance: 55mm (2.165"); Hole depth >35mm (1.378").
- 2) Insert the plastic anchors into the wall.

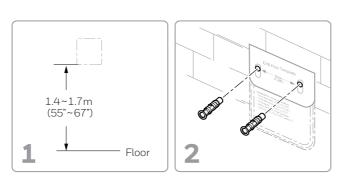


- 3) Secure the bracket on the wall using M4 x 35mm tapping screw.
- 4) Loosen the screw untill the block can be shaken, be careful not to remove the screw completely.

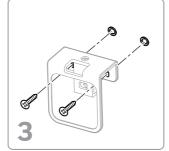



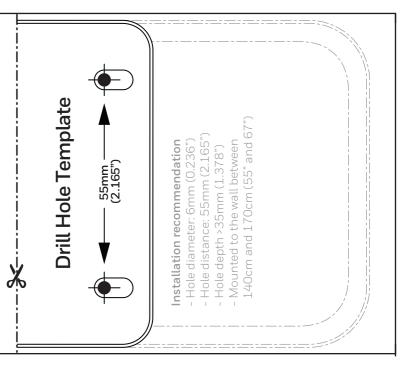

- 5) Insert USB cable into micro USB port.
- 6) Slide air monitor device into the bracket (make sure the screen is facing out and the button is facing up).

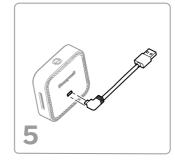




- 7) Make sure it fits into the inner frame of the bracket. 8) Tighten the screw on top and make sure the device
- is secured in the bracket.






- 9) To secure the USB wire vertically, wrap it around the hook in the back.
- 10) Secure the cable to the wall. If there is excess or loose wire, wrap and secure it to prevent a tripping or choking hazard. Installation complete.

Strangulation HAZARD: Children have STRANGLED in cords. Keep this cord out of reach of children (more than 3 ft (1m) away). Do not use with an extension cord.

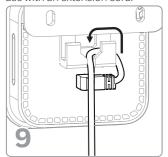

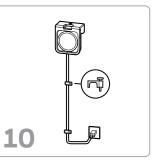

Effection after folding:



	Colo
a cos	1 1
ON	
	1 :

ur:	Ref.
	· ·
_	

Revisions:
 00

Change:
Released

SPSDESIGN | Experience Graphics

Project Name/Brand **Drawing Title:** Scale: Date: Drawn By: Part Number:

Honeywell_HGAS
Quick Install Guide For HTRAM
100%
07.20.2021
Manda