

User Guide

M20-2 self-rescuer

The M20-2 is a compact, lightweight self-rescuer designed for use by trained personnel.



The device should be stored:

- On the user's belt, in the protective case
- or
- In a wall-mounted waterproof box

Points to check before use

The pressure gauge

It measures the pressure of the oxygen in the cylinder. The needle must be in the green zone.



The ball

In the center of the yellow lever, it ensures that the device has not been opened. If this ball is not present, you must change the device.



General condition

The user should check the condition of the housing and guards, and ensure that there are no cracks, fissures or water present.

Using the M20-2

1




The portable gas detector starts ringing.

2



Put the M20-2 facing you. Undo the closure of the case.

3

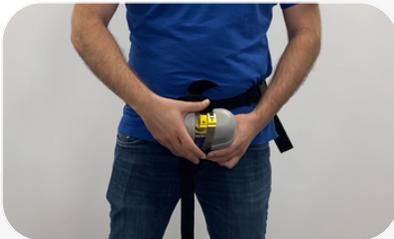

Lift the yellow lever.

4



Remove the cover.

5



Pull the strap to remove the device and put it around your neck.

6



Put the mouthpiece between your teeth and lips.

7



Adjust the nose clip.
You are protected, you can breathe.

8



Unfold the bag.

9



Adjust the strap.

10



You are ready to evacuate.